Printer Troubleshooting ALWAYS REMEMBER TO SAVE A DOCUMENT BEFORE PRINTING. THIS WILL ASSURE YOUR WORK IS SAVED IF YOUR COMPUTER HAS PROBLEMS OR FREEZES!!!

Your printer is giving you a problem what can you do?

- 1. Turn off your printer.
- 2. Restart your computer.
- 3. Turn on your printer
- 4. Open the document you wish to print and try again.

OR

- 1. Get under you computer table and find the small dark gray box with the yellow blinking box. On the back of the box unplug the small black plug count to 5 and then plug it back in.
- 2. Try printing again.

To cancel a printing job already sent to the printer...

- 1. Double click the DJ895C printer icon on the desktop.
- 2. Click on the page icon in the top box or the bottom box if more than one print job has been sent to the printer.
- 3. Click the trashcan.
- 4. Click the top left square box to get rid of the window.

🗖 🔤 FHE 251 DJ 895C			
			1 item Default Printer
Microsoft Word - Docume (print) Page: 1 of 1 Copies: 1 Preparing Page #1			
Name	Pages Copies	Print Time	A